Standard Escape Opening

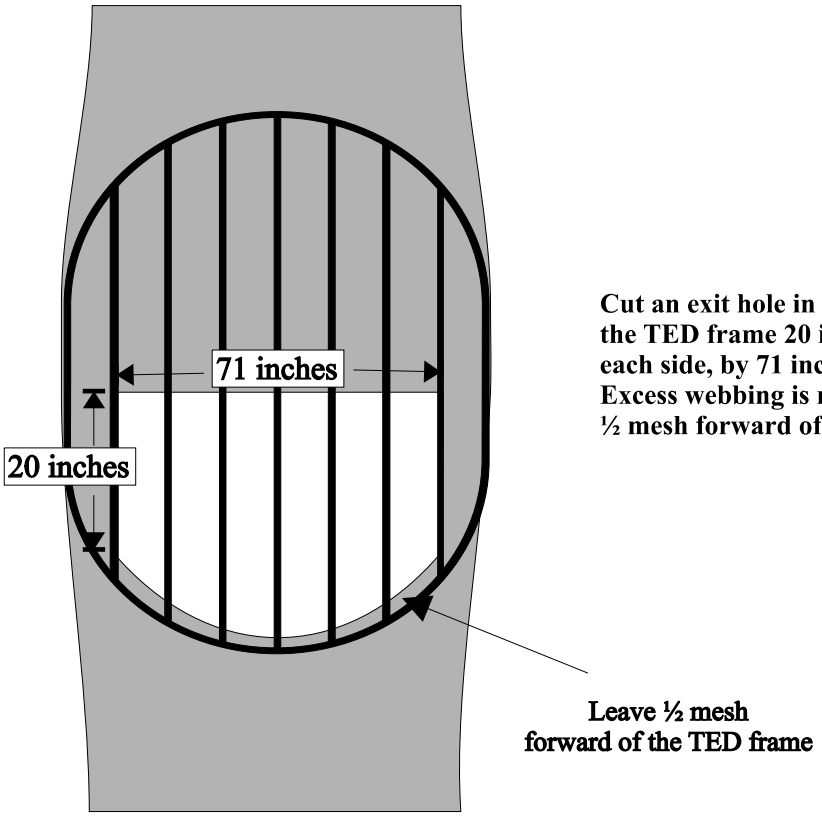

Cut an exit hole in the extension forward of the TED frame 20 inches (51 cm) deep, on each side, by 71 inches (180 cm) across. Excess webbing is removed by cutting across ½ mesh forward of the TED frame.